


BULOVA

# Technical Letter

BOOK NO. 529

ANALOG/DIGITAL – T200

## FEATURES AND APPLICATIONS

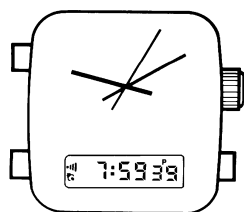

Independent Analog (hands) and Digital (digits) displays of time – the traditional look of an Analog watch with the high technology features available only from a Digital.

**Alarm** – use to wake you up, as a reminder for appointments, etc.

**Chronograph** – use for parking meters, cooking, sporting events, etc.


**Hourly Chime** – use to keep track of time passage, as a reminder for pill taking, etc.

**Conventional (am/pm) or 24 hour time format** – use 24 hour format for working with computers, military time, etc.

**Calendar** – Displays month, date and day.

**Alarm Demonstration** – to demonstrate the alarm, in the Normal Time or Calendar Displays, simultaneously press and hold B and C buttons.

## THE CONTROLS

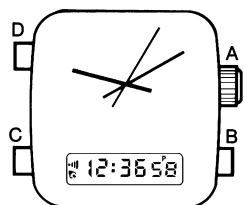

**A. Crown** for setting and synchronizing analog hands


**B. Push Button** for advancing numbers in set modes, light, alarm demo (with C), activate/deactivate alarm, activate/deactivate chime (with C), chronograph start/stop.

**C. Push Button** for entering and selecting set modes, chronograph

split/reset, alarm demo (with B).

**D. Push Button** for changing digital displays.

## THE ANALOG DISPLAY

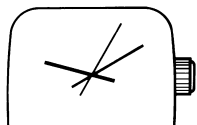

Hours, Minutes and Seconds are displayed in the traditional manner. To set, merely pull the notched crown out when the Second hand reaches the 12 o'clock position all hands will stop. At this point set the Hours and Minutes (Hour and Minute Hands may be turned clockwise or counterclockwise). Set the


Minute Hand to the next approaching minute, now the Second hand can be synchronized with a time signal (telephone beep, etc.) by pressing the crown in when the signal sounds the exact time.

**Note:** When moving from one time zone to another, you may opt to use the Digital display for local time (enabling you to use the Alarm) and the Analog display for time at the point of departure.

## HOW TO SELECT THE FUNCTIONS



## SETTING THE TIME

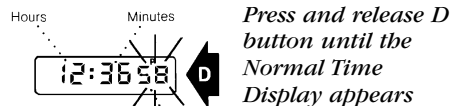

To set Seconds, press and hold C button for at least three seconds. Seconds will flash. To set the Seconds to zero, press "B" button. Seconds synchronization should coincide with the time standard being used (telephone beep, etc.). If the seconds are set to "00" between 30 and 59, the minutes will advance by one minute. This feature is useful for periodically synchronizing your watch to an accurate time standard.

From Seconds setting press C button again. Minutes will flash. Press and release B button to advance Minutes.

From Minutes setting press C button again. Hours will flash. Press and release B button to advance Hours. make sure to select the right indicator (above seconds). A for AM and P for PM.


## TO SELECT THE 12/24 HOUR FORMAT

From Hour setting press C button again. The numbers 12 or 24 will flash, an H indicator will appear at the right side of the display. Use B button to alternate the 12 or 24 Hour format.

After the desired format has been selected, press and release C or D buttons to return to Normal Time Display.

**Note:** To return to Normal time, Alarm Time or Calendar display (depending on the function being set) during any setting sequence, simply press and release D button. If the setting sequence is not continued, the display will automatically return to Normal Time, Alarm Time or Calendar Display (depending on the function being set) within one minute.

## SETTING THE CALENDAR

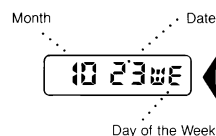


Press and release D button until Calendar Display appear.

To set date, press and hold C button for at least three seconds. Date will flash. Press and release B button to advance Date.

From Date setting, press C button again. Month and Date indicator will flash. Press and release B button to advance Month.

From Month setting, press C button again. Day of Week will flash. press and release B button to advance Day of Week. To return to Normal Time Display, press and release D button.

## SETTING THE ALARM

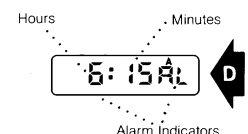

Press and release D button until Alarm Time Display appears.


To set the Alarm Hours, press and release C button. Hours will flash. Press and release B button to advance Hours.

From Hours setting, press C button again. The Minute Digit will flash. Press and release B button to advance the Minute Digit. Press and release C button to return to Alarm Time Display. Use D button to return to Normal Time Display.

To activate or deactivate the alarm: In the Alarm Time Mode, press and release B button to activate or deactivate the alarm (alarm symbol will appear at the upper left corner when activated). To stop the alarm, use any of the three buttons.

**THE HOURLY CHIME**

When activated passage of time is marked by a beep every hour on the hour. To activate or deactivate the Hourly Chime, in the Normal Time or Calendar displays, press and hold C button, at the same time press and release B button (when Hourly Chime is activated, the bell symbol will appear and the colon will flash).

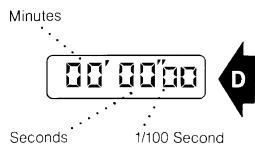**THE CHRONOGRAPH (STOP WATCH)**

*Press and release D button until the Chronograph Display appears.*

To start Chronograph, press and release B button. Press and release B button to stop. Press and release C button to reset Chronograph to zero.

**THE SPLIT OR LAP TIME INDICATOR**

With the chronograph counting Split or Lap time can be obtained by using C button. The S indicator will appear and the display will freeze.

After taking a Lap reading, you will return to the counting Chronograph with the C button. Take as many intermediary readings as you wish (press C button).

To reset it to zero from Chronograph, updating press and release B button, then press and release C button.

The Chronograph counts up to one Hour then repeats. Every button activation is accompanied by a beep if the Hourly chime is activated.

**Note:** From stop or counting Chronograph you can change to other functions by using D button without altering the contents of the memory.

**NIGHT LIGHT**

To enable you to read the display in the dark, your watch has been equipped with a built-in Night Light, merely press B button to illuminate the display.